



VKPC 88843/88850/88855

Tehnički bilten – listopad 2011.

VKPC 88843
VKPC 88850
VKPC 88855



MERCEDES



Savjeti za montažu



OE #: 611 200 11 01
611 200 12 01
646 200 03 01


PROIZVOĐAČ	GLAVNI MODEL	GLAVNI MOTOR
MERCEDES	C-Class CLK E-Class M-Class	C 200/220/270 CDI CLK 270 CDI E 220/220/270 CDI ML 270 CDI

Detaljne informacije potražite u najnovijem SKF-ovom katalogu.


Da biste u skladu s konstrukcijom vodene pumpe montirali VKM 31041 pomoćnu remenicu, potrebno je u kućištu pumpe narezati navoj.

Taj se postupak za dolje navedene vodene pumpe možete obaviti na radnom pultu ili izravno na vozilu:


VKPC 88843

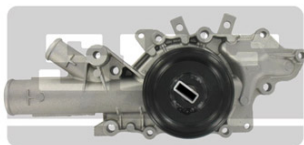

VKPC 88850

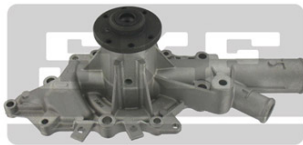

VKPC 88855

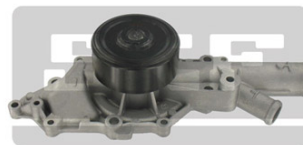



VKPC 88843/88850/88855

Tehnički bilten – listopad 2011.

VKPC 88843
VKPC 88850
VKPC 88855



1) Pritegnite vijak pomoćne remenice. Za to nije nužno upotrijebiti novi vijak.



2) Navoj očistite komprimiranim zrakom.



3) Montirajte novu VKM 31041 pomoćnu remenicu. Pritegnite je momentom prema preporuci proizvođača vozila.

